

SECTION 10-7

REAR QUARTERS

CAUTION: This vehicle is equipped with Supplemental Inflatable Restraint (SIR), refer to **CAUTIONS** in SECTION 9J under "ON-VEHICLE SERVICE" and the SIR Component and Wiring Location view in SECTION 9J before performing service on or around SIR components or wiring. Failure to follow **CAUTIONS** could result in possible air bag deployment, personal injury or otherwise unneeded SIR system repairs.

NOTICE: Always use the correct fastener in the proper location. When you replace a fastener, use **ONLY** the exact part number for that application. General Motors will call out those fasteners that require a replacement after removal. General Motors will also call out the fasteners that require thread lockers or thread sealant. **UNLESS OTHERWISE SPECIFIED**, do not use supplemental coatings (paints, greases, or other corrosion inhibitors) on threaded fasteners or fastener joint interfaces. Generally, such coatings adversely affect the fastener torque and joint clamping force, and may damage the fastener. When you install fasteners, use the correct sequence and tightening specifications. Following these instructions can help you avoid damage to parts and systems.

CONTENTS

On-Vehicle Service.....	10-7-1	Rear Side Door Lower Trim Panel—	
Interior Trim.....	10-7-1	Four - Door Models	10-7-5
Rear Quarter Window Interior Trim—		Rear Side Door Upper Trim Panel—	
Four - Door Models.....	10-7-1	Four - Door Models	10-7-6
Rear Quarter Interior Trim Panel—		Rear Quarter Wheelhousing Interior Trim	
Two - Door Models	10-7-3	Panel—Four - Door Models.....	10-7-6
Rear Seat Belt Retractor Trim Cover—		Rear Quarter Wheelhousing Interior Trim	
Four - Door Models.....	10-7-3	Panel—Two -Door Models.....	10-7-6
Rear Seat Belt Retractor Trim Cover—		Exterior Trim.....	10-7-7
Two - Door Models	10-7-3	Rear Quarter Moldings	10-7-7
B-Pillar Lower Trim Panel—		Rocker Panel Trim Covers	10-7-7
Four - Door Models.....	10-7-4	Fuel Filler Door.....	10-7-8
B-Pillar Upper Trim Panel—		Rear Quarter Window—	
Four - Door Models.....	10-7-4	Four - Door Models	10-7-8
B-Pillar Lower Trim Panel—		Rear Side Door Jamb Switch—	
Two - Door Models	10-7-5	Four - Door Models	10-7-9
B-Pillar Upper Trim Panel—		Specifications.....	10-7-9
Two - Door Models	10-7-5	Fastener Tightening Specifications	10-7-9

ON-VEHICLE SERVICE

INTERIOR TRIM

Rear Quarter Window Interior Trim—Four - Door Models

Figures 1 and 2

Remove or Disconnect

1. Rear seat belt guide loop anchor bolt.
2. Loosen rear door opening weatherstrip.
3. Loosen rear side door opening weatherstrip.
4. Seat belt retractor trim panel
5. Two screws and rear quarter window interior trim from vehicle.

Install or Connect

1. Rear quarter window interior trim to vehicle; secure with two screws.
2. Seat belt retractor trim panel
3. Press rear side door opening weatherstrip into place.
4. Press rear door opening weatherstrip into place.
5. Rear seat belt guide loop anchor bolt.

Tighten

- Rear seat belt guide loop anchor bolt to 40 - 50 N.m (29.0 - 36.5 lb. ft.).
6. Rear seat belt guide loop cover.

7-2 REAR QUARTER

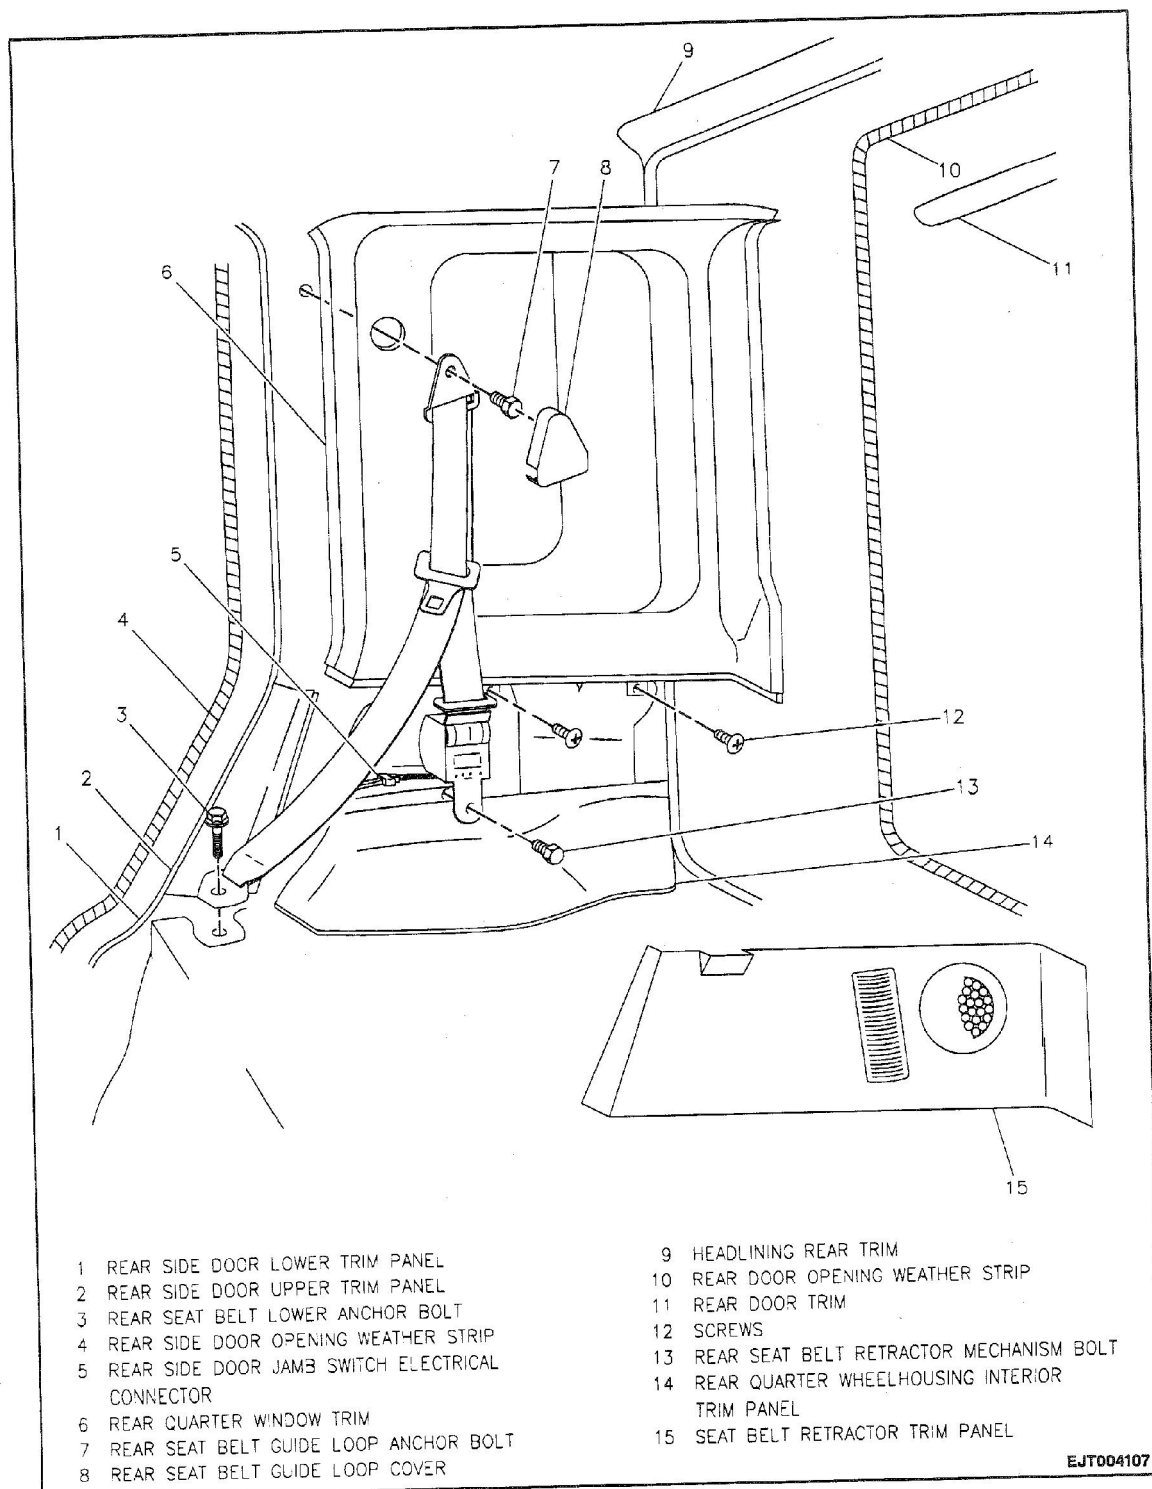


Figure 1—Rear Seat Belt Retractor Trim Panel—Four - Door Models

Rear Quarter Interior Trim Panel—Two - Door Models

Figures 2 and 3

Remove or Disconnect

- One screw from front seat belt trim bezel (Figure 2).
- Pull rear quarter interior trim panel from vehicle, disengaging plastic clips (Figure 3).

Install or Connect

1. Rear quarter interior trim panel to vehicle; press into place, engaging plastic clips (Figure 3).
2. Front seat belt trim bezel to vehicle; secure with one screw.

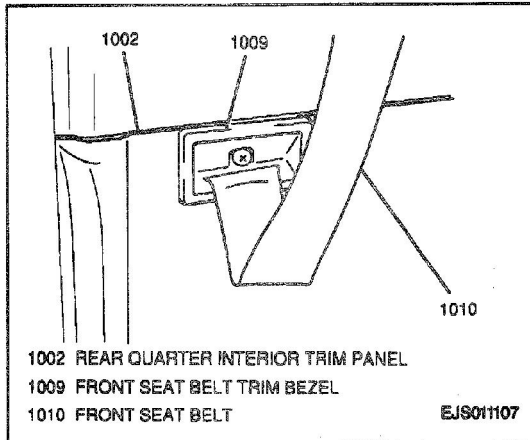


Figure 2—Front Seat Belt Trim Bezel—Two - Door Models

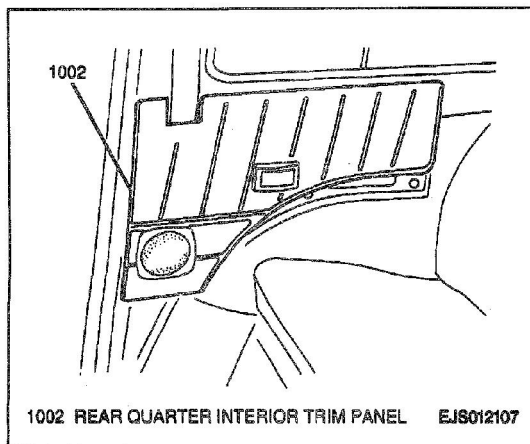


Figure 3—Rear Quarter Interior Trim Panel—Two - Door Models

Rear Seat Belt Retractor Trim Panel—Four - Door Models

Figure 1

Remove or Disconnect

1. Fold rear seatback, pull rear seat release handle and raise rear seat.
2. Rear seat belt retractor trim panel

Install or Connect

1. Rear seat belt retractor trim panel
2. Fold rear seatback, pull rear seat release handle and raise rear seat.

Rear Seat Belt Retractor Trim Cover—Two - Door Models

Figures 4 through 7

Remove or Disconnect

- Raise rear seat cushion to gain access to the rear seat belt lower anchor bolt.
 - Two - Door top refer to SECTION 10-9.
 - Garnish moldings refer to SECTION 10-9.
1. Rear seat belt lower anchor bolt (Figure 4).
 2. Two screws and rubber stopper from vehicle (Figure 5).
 3. Rear seat belt guide loop anchor bolt (Figure 6).
 - Loosen rear door opening weatherstrip.
 4. One screw and rear seat belt retractor trim cover (Figure 7).

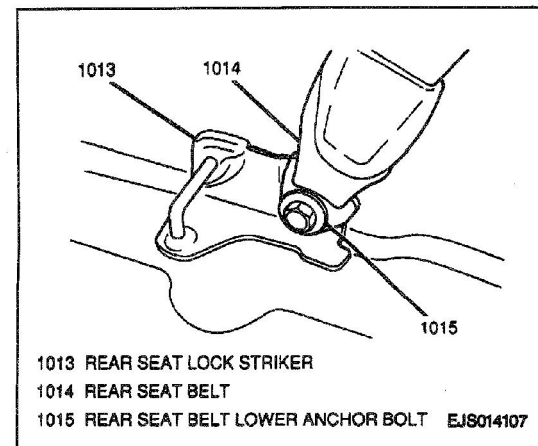


Figure 4—Rear Seat Belt Lower Anchor Bolt—Typical

1-7-4 REAR QUARTER

Install or Connect

1. Rear seat belt retractor trim cover to vehicle; secure with one screw (Figure 7).
- Press rear door opening weatherstrip into place.
2. Rear seat belt guide loop anchor bolt (Figure 6).

Tighten

- Rear seat belt guide loop anchor bolt to 40 - 50 N.m (29.0 - 36.5 lb. ft.).
- 3. Rubber stopper to vehicle; secure with two screws (Figure 5).
- 4. Rear seat belt lower anchor bolt (Figure 4).

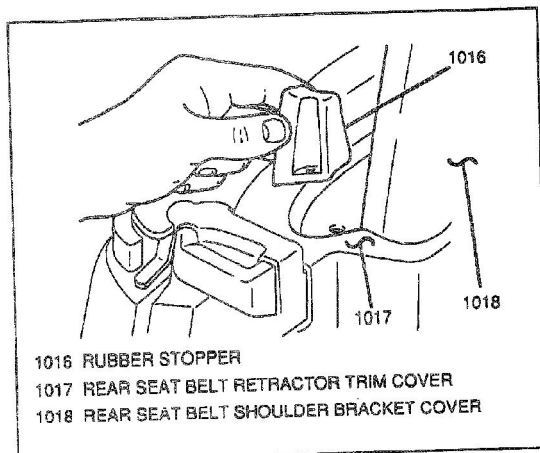


Figure 5—Rubber Stopper—Two - Door Models

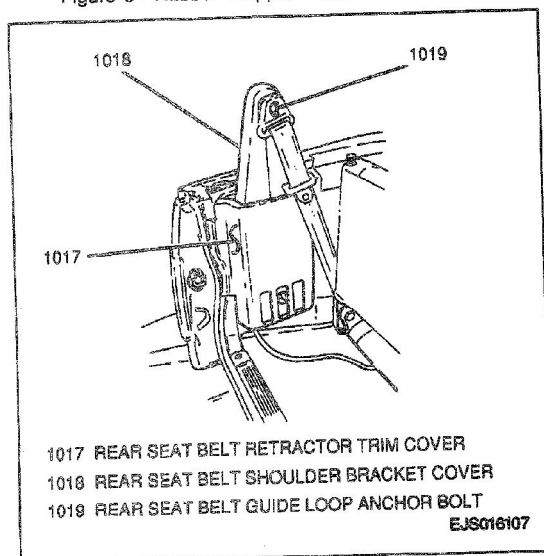


Figure 6—Rear Seat Belt Guide Loop Anchor Bolt Location—Two - Door Models

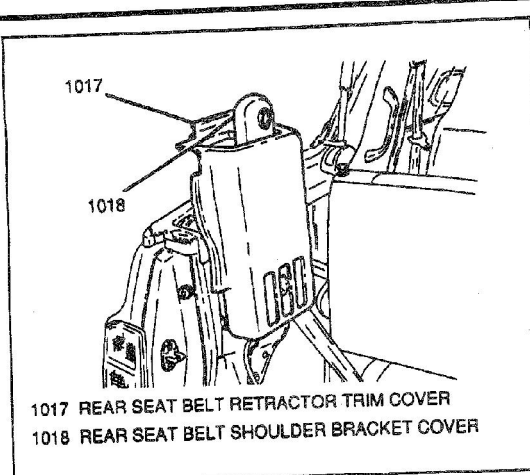


Figure 7—Rear Seat Belt Retractor Trim Cover—Two - Door Models

Tighten

- Rear seat belt lower anchor bolt to 40 - 50 N.m (29.0 - 36.5 lb. ft.).
- Lower rear seat.
- Garnish moldings refer to SECTION 10-9.
- Two - Door top refer to SECTION 10-9.

B-Pillar Lower Trim Panel—Four - Door Models

Remove or Disconnect

1. Front seat belt lower anchor bolt.
- Loosen front door opening weatherstrip.
2. Two plastic clips and B-pillar lower trim panel from vehicle.

Install or Connect

1. B-pillar lower trim panel to vehicle; secure with two plastic clips.
- Press front door opening weatherstrip into place.
2. Front seat belt lower anchor bolt.

Tighten

- Front seat belt lower anchor bolt to 40 - 50 N.m (29.0 - 36.5 lb. ft.).

B-Pillar Upper Trim Panel—Four - Door Models

Remove or Disconnect

1. B-pillar upper trim panel. Refer to "B-Pillar Lower Trim Panel—Four - Door Models" earlier in this section.
2. Front seat belt guide loop cover and anchor bolt.
3. Loosen front and rear side door weatherstrips away from B-pillar upper trim panel
4. One screw and B-pillar upper trim panel from vehicle.

Install or Connect

1. B-pillar upper trim panel to vehicle; secure with one screw.
2. B-pillar upper trim panel. Refer to "B-Pillar Lower Trim Panel—Four - Door Models" earlier in this section.
3. Front seat belt guide loop anchor bolt.

Tighten

- Front seat belt guide loop anchor bolt to 40 - 50 N.m (29.0 - 36.5 lb. ft.).
- 4. Front seat belt guide loop cover.

B-Pillar Lower Trim Panel—Two Door - Models

Figure 8

Remove or Disconnect

1. Front seat belt lower anchor bolt (Figure 8).
 - Loosen front door opening weatherstrip (Figure 8).
2. Two plastic clips and B-pillar lower trim panel from vehicle (Figure 8).

Install or Connect

1. B-pillar lower trim panel to vehicle; secure with two plastic clips (Figure 8).
 - Press front door opening weatherstrip into place.
2. Front seat belt lower anchor bolt (Figure 8).

Tighten

- Front seat belt lower anchor bolt to 40 - 50 N.m (29.0 - 36.5 lb. ft.).

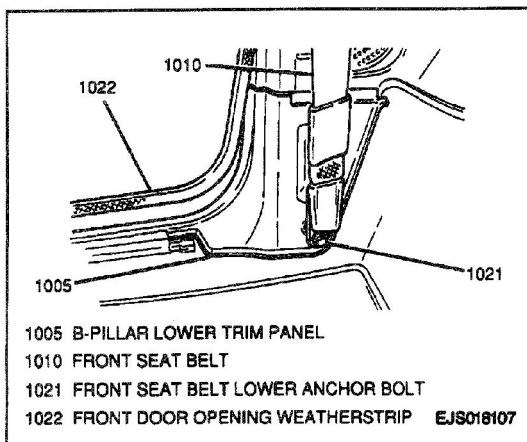


Figure 8—B-Pillar Lower Trim Panel—Two -Door Models

B-Pillar Upper Trim Panel—Two - Door Models

Figure 9

Remove or Disconnect

1. Front seat belt guide loop cover and anchor bolt (Figure 9).
2. Two screws and assist handle from vehicle (Figure 9).
3. Three plastic clips and B-pillar upper trim panel from vehicle (Figure 9).

Install or Connect

1. B-pillar upper trim panel to vehicle; secure with three plastic clips (Figure 9).
2. Assist handle to vehicle; secure with two screws (Figure 9).
3. Front seat belt guide loop anchor bolt (Figure 9).

Tighten

- Front seat belt guide loop anchor bolt to 40 - 50 N.m (29.0 - 36.5 lb. ft.).
- 4. Front seat belt guide loop cover (Figure 9).

Rear Side Door Lower Trim Panel—Four - Door Models

Remove or Disconnect

1. Rear seat belt retractor trim panel. Refer to "Rear Seat Belt Retractor Trim Panel—Four - Door Models" earlier in this section.
2. Rear quarter window interior trim. Refer to "Rear Quarter Window Interior Trim—Four - Door Models" earlier in this section.

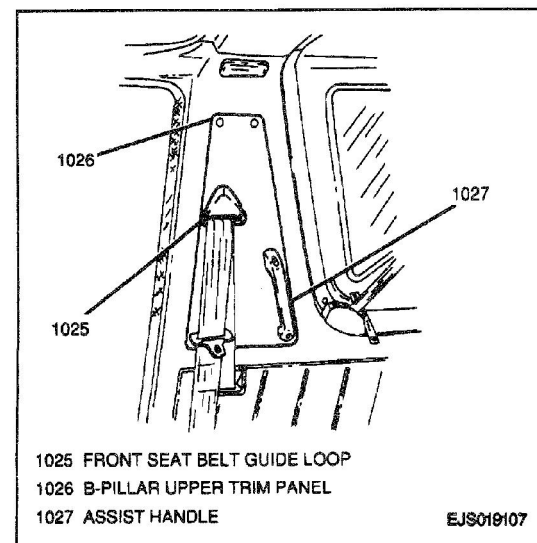


Figure 9—B-Pillar Upper Trim Panel—Two -Door Models

10-7-6 REAR QUARTER

3. Two screws and rear side door upper trim panel from vehicle.
4. Two screws and rear side door scuff panel from vehicle.
5. One push clip, two screws and rear side door lower trim panel from vehicle.

Install or Connect

1. Rear side door lower trim panel to vehicle with two screws and one push clip.
2. Rear side door upper trim panel to vehicle with two screws.
3. Rear side door scuff panel to vehicle with two screws.
4. Rear quarter window interior trim. Refer to "Rear Quarter Window Interior Trim—Four - Door Models" earlier in this section.
5. Rear seat belt retractor trim panel. Refer to "Rear Seat Belt Retractor Trim Panel—Four - Door Models" earlier in this section.

Rear Side Door Upper Trim Panel—Four - Door Models

Remove or Disconnect

1. Rear seat belt retractor trim panel. Refer to "Rear Seat Belt Retractor Trim Panel—Four - Door Models" earlier in this section.
2. Two screws and rear side door upper trim panel from vehicle.

Install or Connect

1. Rear side door upper trim panel to vehicle with two screws.
2. Rear seat belt retractor trim panel. Refer to "Rear Seat Belt Retractor Trim Panel—Four - Door Models" earlier in this section.

Rear Quarter Wheelhousing Interior Trim Panel—Four -Door Models

Figure 1

Remove or Disconnect

1. Rear seat belt retractor trim panel. Refer to "Rear Seat Belt Retractor Trim Panel—Four - Door Models" earlier in this section.
2. Rear quarter window interior trim. Refer to "Rear Quarter Window Interior Trim—Four - Door Models" earlier in this section.
3. One push clip, two screws and Rear side door upper trim panel from vehicle.
4. Two screws and rear side door scuff panel from vehicle.

5. Two screws and Rear side door lower trim panel from vehicle.
6. Wheelhousing interior trim panel from vehicle.

Install or Connect

1. Rear quarter window interior trim to vehicle.
2. Rear side door lower trim panel to vehicle with two screws.
3. Rear side door upper trim panel to vehicle with two screws and one push clip.
4. Rear side door scuff panel to vehicle with two screws.
5. Rear quarter window interior trim. Refer to "Rear Quarter Window Interior Trim—Four - Door Models" earlier in this section.
6. Rear seat belt retractor trim panel. Refer to "Rear Seat Belt Retractor Trim Panel—Four - Door Models" earlier in this section.

Rear Quarter Wheelhousing Interior Trim Panel—Two -Door Models

Figures 2, 3, and 10

Remove or Disconnect

1. One screw from front seat belt trim bezel (Figure 2).
 - Pull rear quarter interior trim panel from vehicle, disengaging plastic clips (Figure 3).
 - Loosen rear door opening weatherstrip.
2. Rear seat belt retractor trim cover from vehicle. Refer to "Rear Seat Belt Retractor Trim Cover—Two - Door Models" earlier in this section.
3. Four screws and rear door sill plate from vehicle (Figure 10).
4. Plastic snap at the front of the rear floor carpet.
 - Pull rear floor carpet away and remove rear quarter wheelhousing trim panel from vehicle.

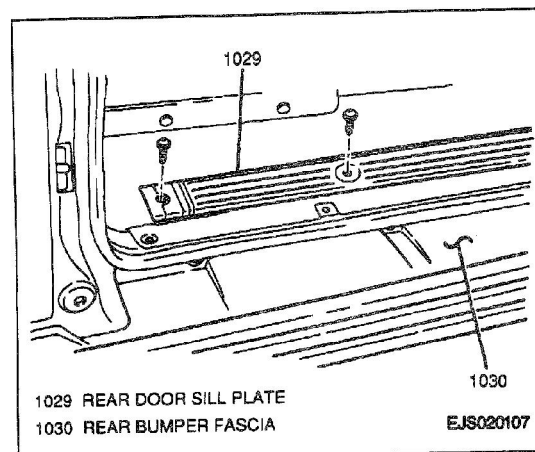


Figure 10—Rear Door Sill Plate

Install or Connect

1. Rear quarter wheelhousing trim panel to vehicle.
 - Place rear floor carpet into position and secure with plastic snap at the front of the rear floor carpet.
2. Rear door sill plate to vehicle; secure with four screws (Figure 10).
3. Rear seat belt retractor trim cover. Refer to "Rear Seat Belt Retractor Trim Cover—Two - Door Models" earlier in this section.
4. Rear seat belt retractor trim panel to vehicle; secure with two plastic retaining clips.
 - Press rear door opening weatherstrip into place.
5. Rear quarter interior trim panel to vehicle; press into place, engaging plastic clips (Figure 1).
6. Front seat belt trim bezel to vehicle; secure with one screw (Figure 2).

EXTERIOR TRIM

Rear Quarter Moldings

All exterior moldings are retained with adhesive. Refer to SECTION 10-1 for all exterior molding service procedures.

Rocker Panel Trim Covers

Front

Figures 11 and 12

Remove or Disconnect

- Two screws, one nut and lift rocker panel front trim cover off front retainer and remove cover from rocker panel (Figure 12).

Install or Connect

- Fit rocker panel front trim cover onto front retainer; secure with two screws and nuts (Figure 12).

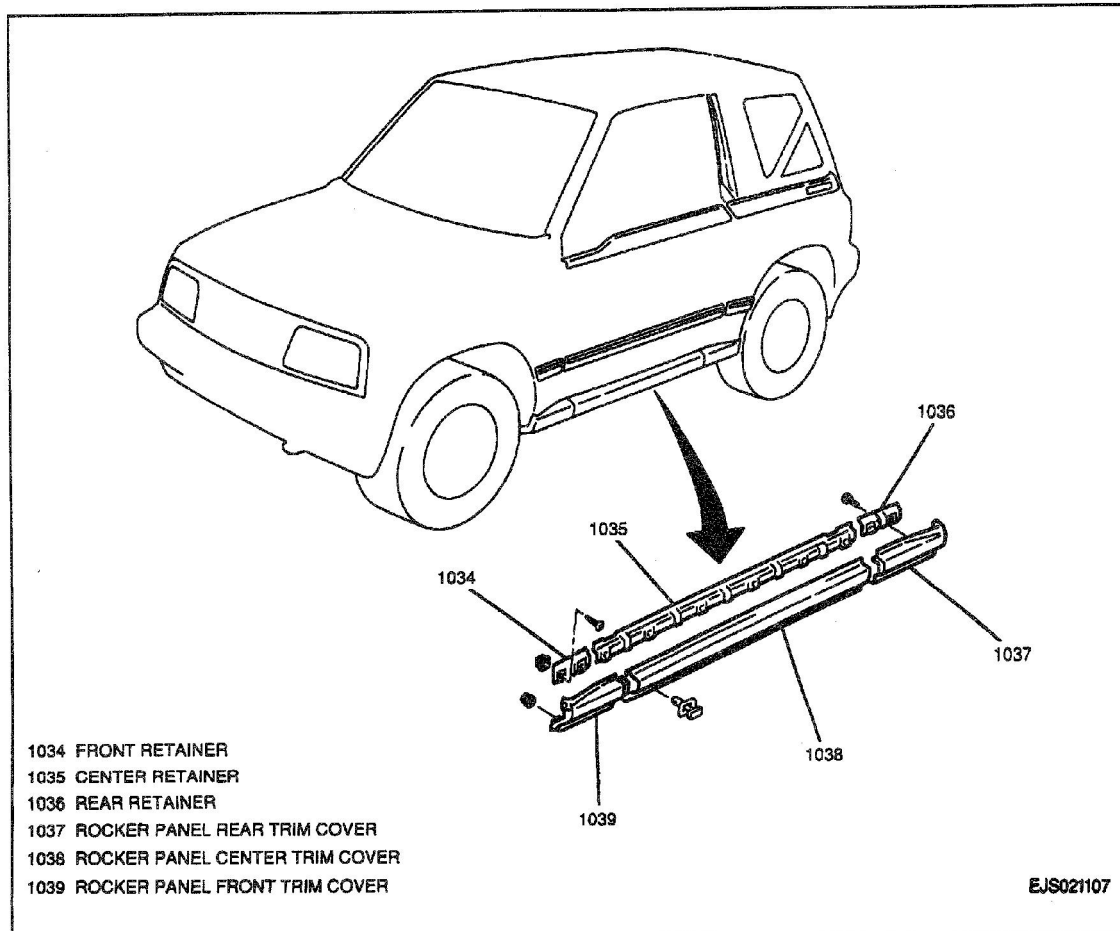


Figure 11—Rocker Panel Trim Covers—Two -Door Model Shown, Four - Door Model Similar

10-7-8 REAR QUARTER

Center

Figure 11

Remove or Disconnect

- Four plastic push pins from rocker panel center trim cover.
- Lift rocker panel center trim cover off center retainer and remove cover from rocker panel (Figure 11).

Install or Connect

- Fit rocker panel center trim cover onto center retainer; secure to rocker panel with four plastic push pins (Figure 11).

Rear

Figures 11 and 13

Remove or Disconnect

- Two nuts and lift rocker panel rear trim cover off rear retainer and remove cover from rocker panel (Figure 13).

Install or Connect

- Fit rocker panel rear trim cover onto rear retainer; secure with two nuts (Figure 13).

Fuel Filler Door

Figure 14

Remove or Disconnect

1. Two screws and fuel filler door from vehicle.
2. Retaining clip and lock assembly from fuel filler door (if equipped).

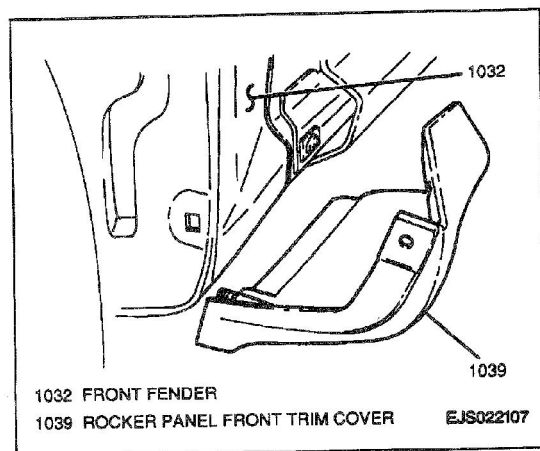


Figure 12—Rocker Panel Front Trim Cover

Install or Connect

1. Lock assembly to fuel filler door with retaining clip (if equipped).
2. Fuel filler door to vehicle with two screws.

Rear Quarter Window—Four - Door Models

For the servicing of the rear quarter window, refer to SECTION 10-2.

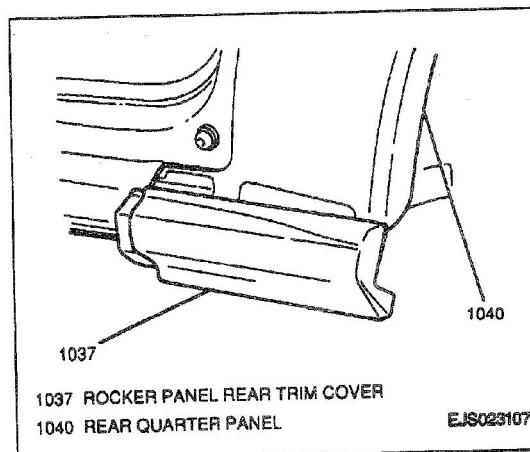


Figure 13—Rocker Panel Rear Trim Cover—Two - Door Model Shown, Four - Door Model Similar

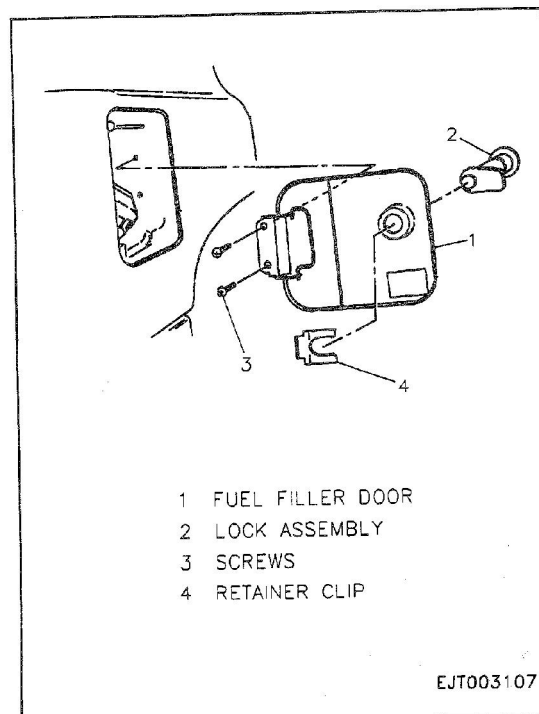


Figure 14—Fuel Filler Door—Four - Door Model Shown, Two - Door Model Similar

Rear Side Door Jamb Switch—Four - Door Models

Figure 1

Remove or Disconnect

1. Negative (-) battery cable.
2. Rubber boot from rear side door jamb switch.
3. Rear seat belt retractor trim panel. Refer to "Rear Seat Belt Retractor Trim Panel—Four-Door Models" earlier in this section.
4. Rear side door jamb switch electrical connector (Figure 1).

Install or Connect

1. Rear side door jamb switch electrical connector (Figure 1).
2. Rear side door jamb switch to door jamb.
3. Rubber boot to rear side door jamb switch.
4. Rear seat belt retractor trim panel. Refer to "Rear Seat Belt Retractor Trim Panel—Four-Door Models" earlier in this section.
5. Negative (-) battery cable.

Tighten

- Negative (-) battery cable-to-negative (-) battery terminal retainer to 15 N.m (11 lb. ft.).

SPECIFICATIONS

FASTENER TIGHTENING SPECIFICATIONS

Front Seat Belt Guide Loop Anchor Bolt.....	40 - 50 N.m (29.0 - 36.5 lb. ft.)
Front Seat Belt Lower Anchor Bolt.....	40 - 50 N.m (29.0 - 36.5 lb. ft.)
Rear Seat Belt Guide Loop Anchor Bolt.....	40 - 50 N.m (29.0 - 36.5 lb. ft.)
Rear Seat Belt Lower Anchor Bolt.....	40 - 50 N.m (29.0 - 36.5 lb. ft.)
Rocker Panel Front Trim Cover Nut.....	15 N.m (11 lb. ft.)
Rocker Panel Rear Trim Cover Nut.....	15 N.m (11 lb. ft.)
Negative (-) Battery Cable-to-Negative (-) Battery Terminal Retainer.....	15 N.m (11 lb. ft.)

10-7-10 REAR QUARTER

BLANK